


BRP-Rotax

INSTALLATION MANUAL

- | | | | |
|----|--|-------|--|
| 14 | capacitor | 1 | 2 electronic modules (A and B) |
| 15 | 2 ignition switches | 2-3 | plug connection for ignition switch |
| 16 | master switch | 4 | integrated generator |
| 17 | starter switch | 5-6 | external regulator - rectifier with plug connections |
| 18 | control lamp | 7 | electric starter |
| 19 | battery relay | 8-9 | starter relay with plug connection |
| 20 | battery | 10-12 | external alternator with connections |
| 21 | bus bar | 13 | electric rev-counter |
| 22 | capacitor | | |
| 23 | plug connection for trigger coil assy. | | |
| 24 | trigger coil assy. (tachometer) | | |
| 25 | electrical fuel pump | | |

GOOGLE:
"RANS 57 INFO"
FOR MORE ALTERNATIVES
AND DISCUSSION

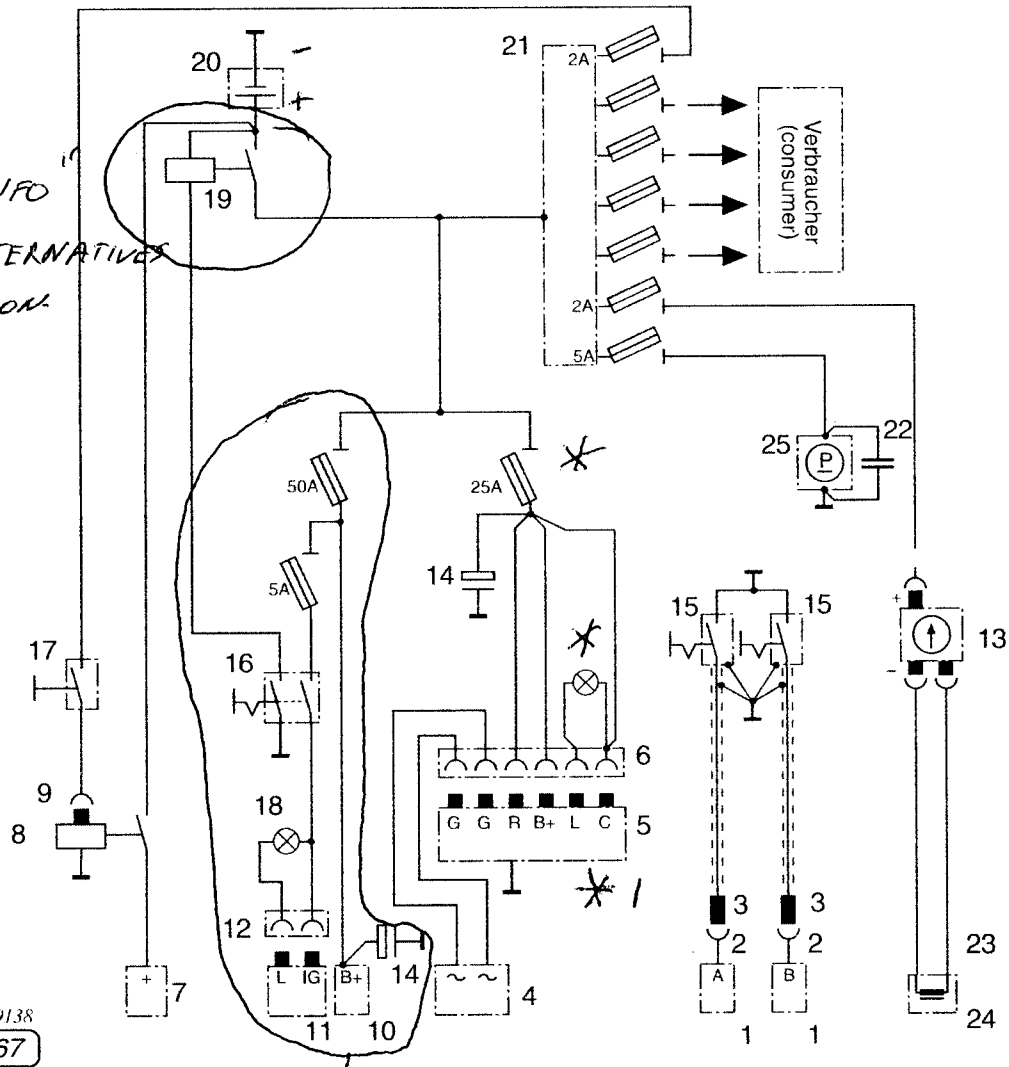

004059 09138
Fig. 67

Wiring symbols to DIN 40712, 40713, 40716 and 40719.

MAYBE NOT PRESENT
WHEN NO EXTERNAL ACT.

* 1 RANS SHOWS THIS FLIPPED OVER
SO CHECK LETTERING